

# INDEX

<p>Liftable Propulsion System— BOB Drive 1</p> <p>BOB Drive 2</p> <p>Diesel engines for the BOB Drive 3</p> <p>Selection of engine power 3</p> <p>Three ways of mounting the engine 4</p> <p>Selection of V-belt transmission 5</p> <p>Selection of propeller 5</p> <p>Measuring propeller diameter and pitch 6</p> <p>BOB Drive components 7</p> <p>Manufacture of BOB Drive components 8</p> <p>Stern tube forward end 9</p> <p>Stern tube aft end 9</p> <p>Propeller shaft 10</p> <p>V-belt pulleys 11</p> <p>Stern gear assembly 12</p> <p>Stern gear section 13</p> <p>Chassis — Side mounted engine 14</p> <p>Pivots 15</p> <p>Bellows flanges 16</p> <p>Engine mounts 17</p> <p>Alignment of stern tube 18</p> <p>Skeg 19</p>	<p>Rudder fitting 20</p> <p>Wood rudder 21</p> <p>Alternative large rudder 22</p> <p>Tunnel 23</p> <p>Tunnel 24</p> <p>Watertight bulkhead 25</p> <p>Rudder platform 26</p> <p>Alignment of BOB Drive 27</p> <p>Bellows 28</p> <p>Anti-corrosion treatment 28</p> <p>Freshwater cooling system 29</p> <p>Cooling coil in tunnel 30</p> <p>Seawater cooling system 31</p> <p>Tunnel modification 31</p> <p>Width requirements for installation 32</p> <p>Chassis — Top mounted engine 33</p> <p>Chassis — Forward mounted engine 34</p> <p>Forward mounted engine — flexible stuffing box 35</p> <p>Tunnel — Forward mounted engine 36</p> <p>Alternative bellows 36</p> <p>Engine protection 37</p> <p>Operation and maintenance 38</p>
--	---